

Launchtech.co.uk - Procedures

Manufacturer: Range Rover
System: Service Light Reset

Manual procedure to Reset Service Indicator of Range Rover (L3220 & Range Rover Sport (not supercharged) (L320)

1) Procedure to check/reset service status – Distance counter

- Switch ignition OFF
- Press and Hold left instrument panel reset button, switch ignition ON to position 'I' (accessories)
- Keep reset button pressed for approximately 5 seconds until the LCD displays 'RESET SIA'. The distance to service (e.g. 2150 miles) and the service type (e.g. Inspection/oil service) will be displayed.
- Has the 'Reset Distance' limit been reached or exceeded?
 - NO - Follow instructions in section 2 below
 - YES - Follow 'Reset Distance Counter' instructions below

Reset Distance counter procedure

- Press and hold left instrument reset button for 5 seconds. 'RESET' will begin to flash on the LCD display.
- To reset distance the left hand button should be pressed before the 'RESET' message has flashed 5 times
- The LCD will display 'END SIA'. Switch ignition off

2) Procedure to check/reset service status – Date counter

- Press left instrument panel reset button once. The LCD will display 'RESET SIA' followed by the service due date.
- Has the 'Reset Date limit been reached or exceeded?
 - NO – Press the left instrument button once. The LCD will display 'END SIA' to indicate the service interval check/reset procedure has been cancelled.
 - YES - Follow 'Reset Date Counter' instructions below

Reset Date counter procedure

- Press and hold left instrument reset button for 5 seconds. 'RESET' will begin to flash on the LCD display.
- To reset distance the left hand button should be pressed before the 'RESET' message has flashed 5 times
- The LCD will display 'END SIA'. Switch ignition off